


SHADOWGAP PERIMETER DETAIL

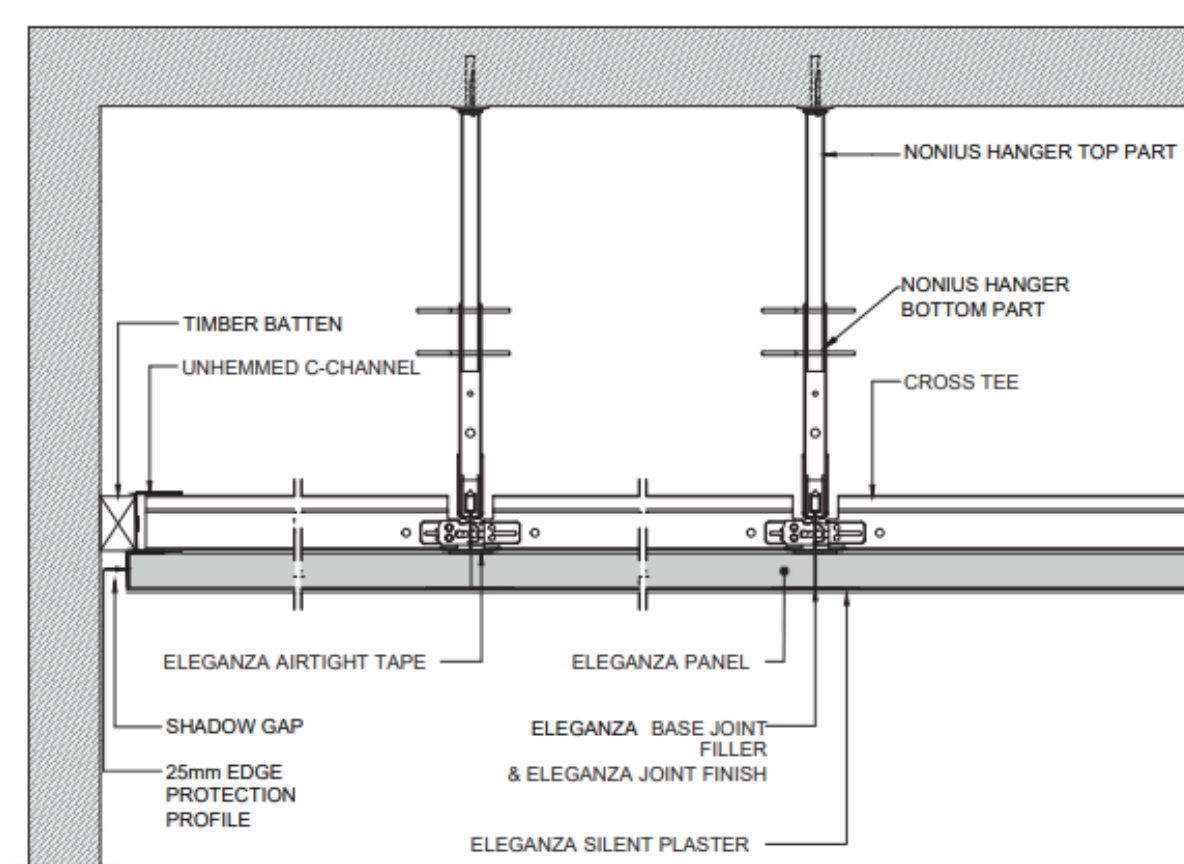

Allow sufficient air passage through timber batten (drilled holes or gaps between battens) to equalise pressure between the room and plenum.