


UPSTAND / BULKHEAD DETAIL

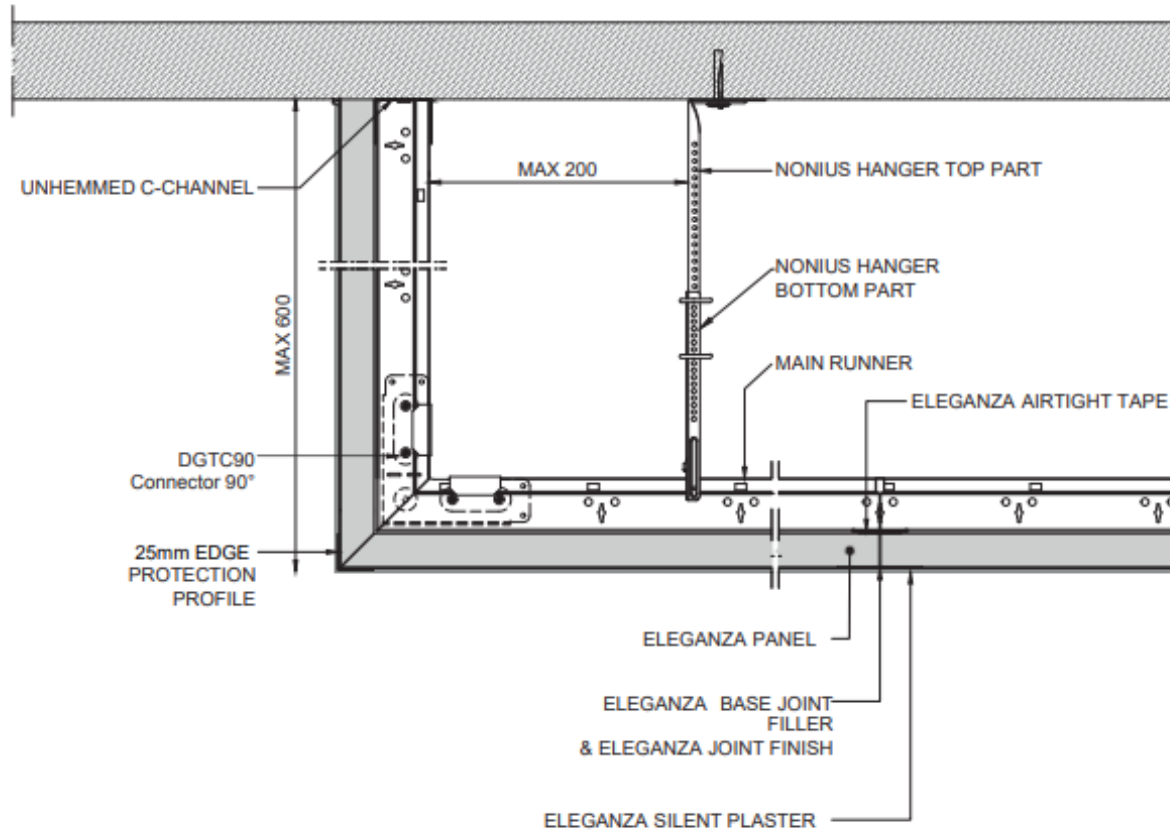

For all-round design as Upstand or Bulkhead Detail a sufficient air passage must be provided to equalise pressure between the room and plenum (e.g., Shadowgap Perimeter or floating perimeter along at least one edge).